



Original	Replacement
Open/Close	Eject / Surround
Power	Power
Bluetooth	Shift + 9
USB	Shift + 8
AUX/Digital	Shift + 7
Net	Shift + Display / Media
Tuner	Shift + 6
CD	Shift + 3
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9

Original	Replacement
Memory	Guide / EPG / -/--
0	0
Option	Setup / OPT /
<<</<<	<<< / Tune-
>>>/>>>	>>> / Tune+
Up	Up
Left	Left
Enter	OK
Right	Right
Down	Down
Stop	Stop / Hold
Play	Play / Slow
Pause	Pause / Step / Freeze
Volume+	Vol+
Mute	Mute / Dimmer
Volume-	Vol-
Repeat	Green / APP / Repeat





Original	Replacement	Original	Replacement
SHUFFLE	Shuffle		Blue / Prime Video / Random
DISPLAY	Display		Display / Media
DIMMER	Dimmer	+	Shift + Mute / Dimmer
SLEEP	Sleep		Sleep / Timer
HOME	Home		Menu / Home
A	Favorites A		Sound / Title
B	Favorites B		Audio / Lang I/II
C	Favorites C		Subtitle / EQ

Original	Replacement

