




 
 
 

 
 
 

 























Original	Replacement	Original	Replacement
	Left		8
	OK		9
	Right		Picture / Format
	Power		Text / Goto
	Down		0
	Back / Return		Red / Netflix / Search
	Up		Guide / EPG / -/--
	AV / Input / RDS		Sleep / Timer
	1		Display / Media
	2		Info / Angle
	3		Smart / List
	Rec / Rec Mode		Mute / Dimmer
	4		Shift + 6
	5		TV/Radio /
	6		I<< / Preset-
	Exit / Cancel / Clear		>>I / Preset+
	7		Vol+





Original	Replacement	Original	Replacement
	Pause CD		Pause / Step / Freeze
	Play CD		Play / Slow
	Stop CD		Stop / Hold
	Random		Blue / Prime Video / Random
	Control Volumen Down		Vol-

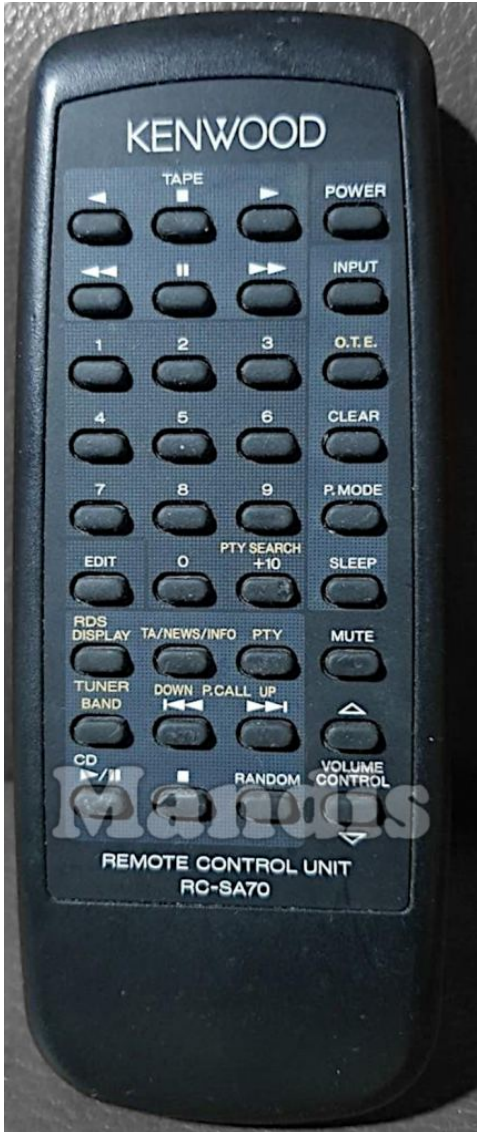