



Original	Replacement
Power	Power
Muting	Mute / Dimmer
Play	Play / Slow
Pause	Pause / Step / Freeze
Stop	Stop / Hold
<<	<< / Tune-
>>	>> / Tune+
I<</Preset-	I<< / Preset-
>>I/Preset+	>>I / Preset+
Sound Mode	Sound / Title
Audio	Audio / Lang I/II
Subtitle/D.Tuning	Subtitle / EQ
Picture Navi	Picture / Format
S-Air Mode	Zoom / Size
Sleep	Sleep / Timer
Tv Input	AV / Input / RDS
System	D.Menu / Top



Menu/Enter


 
Menu

Original	Replacement
Display/Tools	Setup / OPT /
One -Touch Play	Text / Goto
Menu/DVD	Menu / Home
Theatre	TV/Radio /
Up	Up
Angle	Info / Angle
Left	Left
OK	OK
Right	Right
Clear	Exit / Cancel / Clear
Down	Down
Return	Back / Return
Volume+	Vol+
Dynamic Bass	Smart / List
Function+	CH+ / Page+
Volume-	Vol-
Display	Display / Media





Original	Replacement
 Power	 Power
 Tv Vol+	 Vol+
 Tv Input	 AV / Input / RDS
 Tv Vol-	 Vol-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Guide / EPG / -/--
 0	 0
 Enter	 Fav / Marker / PC
 Menu	 Menu / Home

Original	Replacement
 Muting	 Mute / Dimmer
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Tools	 Setup / OPT /
 Prog-	 CH- / Page-
 Prog+	 CH+ / Page+

