 
 


 







 




 




 

 


 






Original	Replacement	Original	Replacement
	 Green / APP / Repeat		 Down
	 Power		 CH- / Page-
	 Yellow / YouTube / Repeat		 Menu / Home
	 Red / Netflix / Search		 OK
	 Blue / Prime Video / Random		 Smart / List
	 << / Tune-		 1
	 >> / Tune+		 2
	 << / Preset-		 3
	 >> / Preset+		 4
	 TV/Radio /		 5
	 Display / Media		 6
	 Up		 7
	 CH+ / Page+		 8
	 Left		 9
	 Vol-		 Fav / Marker / PC
	 Right		 0
	 Vol+		 Mute / Dimmer

