





Original	Replacement	Original	Replacement
 Power	 Power	 Red / Program	 Red / Netflix / Search
 I<<	 I<< / Preset-	 Green / Slow	 Green / APP / Repeat
 Open/Close	 Eject / Surround	 Yellow / Repeat	 Yellow / YouTube / Repeat
 <<	 << / Tune-	 Blue / A-B	 Blue / Prime Video / Random
 >>	 >> / Tune+	 CH +	 CH+ / Page+
 >>	 >> / Preset+	 Menu	 Menu / Home
 Play / Pause	 Play / Slow	 Vol +	 Vol+
 Play / Pause	 Pause / Step / Freeze	 CH -	 CH- / Page-
 TV/TXT /	 Shift + LANG I/II / Audio / Lang I/II	 Source	 AV / Input / RDS
 TV/TXT /	 Shift + GOTO / Text / Text	 Vol -	 Vol-
 Cancel / Zoom	 Shift + CLEAR / Exit / Cancel / Clear	 DVD	 Shift + 2
 Reveal / Subtitle	 Shift + EQ / Subtitle / EQ	 DVD-Setup/Rec	 D.Menu / Top
 Stop	 Stop / Hold	 Up	 Up
 Hold / Menu	 Shift + HOME / Menu / Menu	 Left	 Left
 Size / Angle	 Zoom / Size	 OK	 OK
 Subpage / Title	 Setup / OPT /	 Right	 Right
 Index / Goto	 Info / Angle	 Down	 Down





Original	Replacement
DVB	Smart / List
Exit	Exit / Cancel / Clear
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
-/--	Shift + Guide / EPG / -/--
0	0
Recall	Back / Return
Picture	Picture / Format
Sound	Sound / Title
Nicam / A2	Audio / Lang I/II

Original	Replacement
Mute	Mute / Dimmer
Sleep	Sleep / Timer
TV / Radio	TV/Radio /
FAV	Fav / Marker / PC
Fav +	Shift + CH+ /
Fav -	Shift + CH- /
Pic. Format	Shift + Zoom /
Subtitle	Subtitle / EQ
Text	Text / Goto
Display	Display / Media
Language	Shift + Sound / Title
EPG	Guide / EPG / -/--

