


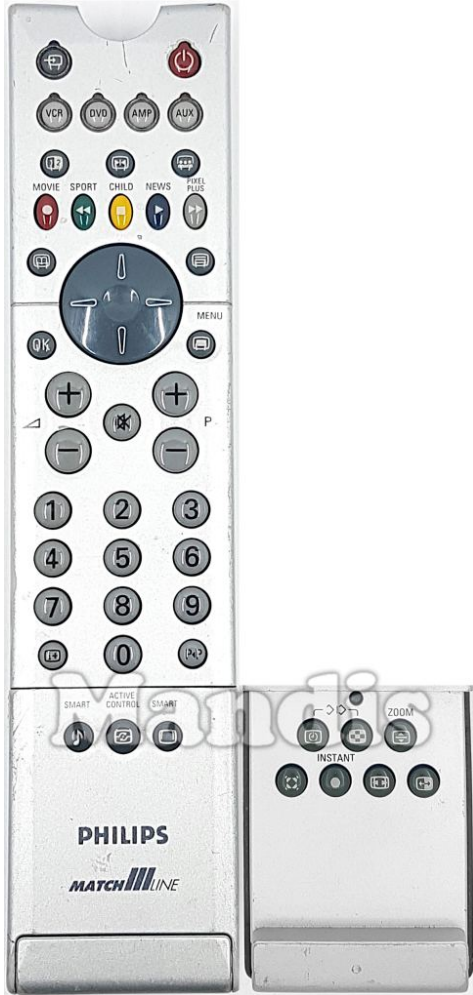






















Original	Replacement
	AV / Input / RDS
	Power
	Shift + 4
	Shift + 2
	Shift + 5
	Shift + 7
	Picture / Format
	Shift + Zoom /
	Subtitle / EQ
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
>>/Pixel Plus button icon"/>	>> / Tune+
	Guide / EPG / -/--
	Up
	Text / Goto


Original	Replacement
	Left
	Right
	OK
	Down
	Menu / Home
	Vol+
	CH+ / Page+
	Vol-
	Mute / Dimmer
	CH- / Page-
	1
	2
	3
	4
	5
	6
	7






	Original	Replacement	Original	Replacement
	8	 8		
	9	 9		
	[i+]	 Info / Angle		
	0	 0		
	P<P	 Fav / Marker / PC		
	♪ Smart	 Sound / Title		
	[-o-]/Active Control	 D.Menu / Top		
	[] Smart	 Smart / List		
	[o]	 TV/Radio /		
	Setup	 Setup / OPT /		
	[+]	 Display / Media		
	[♦]/Zoom	 Zoom / Size		
	[]	 Audio / Lang I/II		
	Instant	 Back / Return		
	[<>]	 Sleep / Timer		
	[↔]	 Eject / Surround		



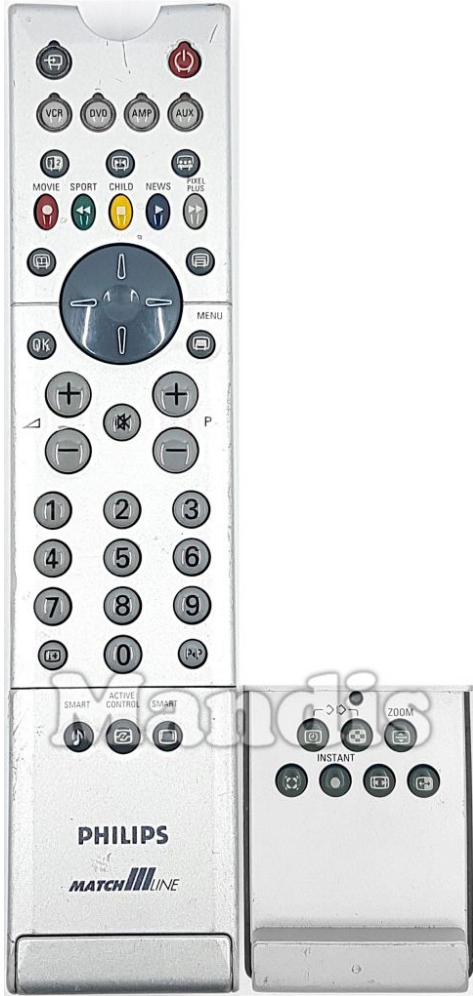


Original	Replacement	Original	Replacement
	AV / Input / RDS		Right
	Power		OK
	Shift + 4		Down
	Shift + 2		Menu / Home
	Shift + 5		Vol+
	Shift + 7		CH+ / Page+
	Zoom / Size		Vol-
	Subtitle / EQ		Mute / Dimmer
	Red / Netflix / Search		CH- / Page-
	Green / APP / Repeat		1
	Yellow / YouTube / Repeat		2
	Blue / Prime Video / Random		3
	>> / Tune+		4
	Guide / EPG / -/--		5
	Up		6
	Text / Goto		7
	Left		8



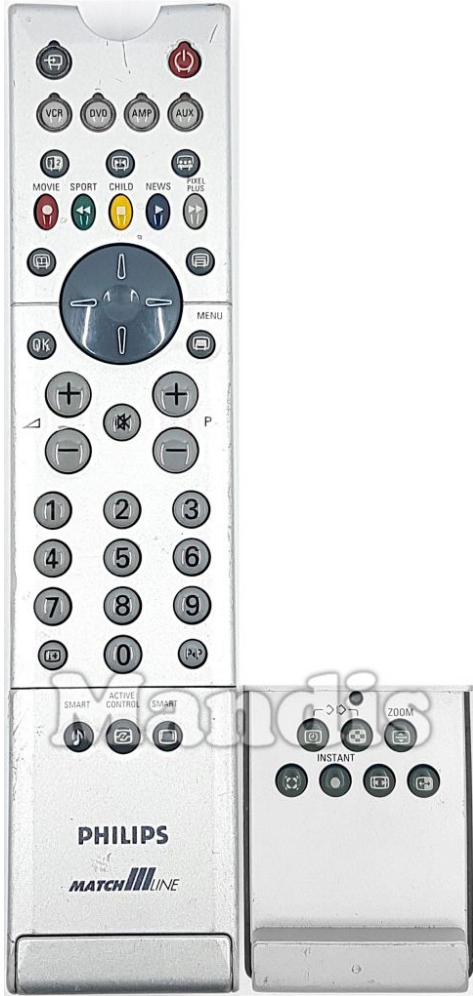





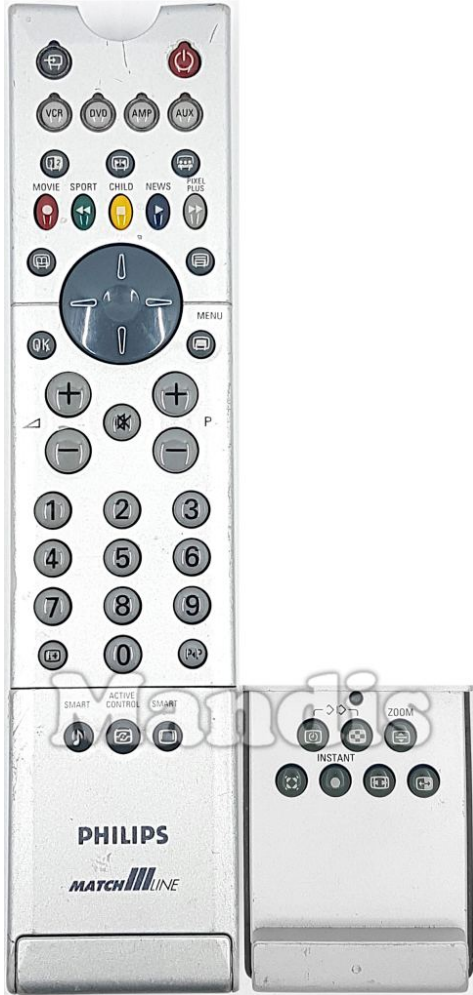



























 

























 
 






Original	Replacement	Original	Replacement
	AV / Input / RDS		Right
	Power		OK
	Shift + 4		Down
	Shift + 2		Menu / Home
	Shift + 5		Vol+
	Shift + 7		CH+ / Page+
	Zoom / Size		Vol-
	Subtitle / EQ		Mute / Dimmer
	Red / Netflix / Search		CH- / Page-
	Green / APP / Repeat		1
	Yellow / YouTube / Repeat		2
	Blue / Prime Video / Random		3
	>> / Tune+		4
	Guide / EPG / -/--		5
	Up		6
	Text / Goto		7
	Left		8





Original	Replacement	Original	Replacement
	 AV / Input / RDS		 Vol+
	 Power		 CH+ / Page+
	 Shift + 4		 Vol-
	 Shift + 2		 Mute / Dimmer
	 Shift + 5		 CH- / Page-
	 Shift + 7		 1
	 Subtitle / EQ		 2
	 Green / APP / Repeat		 3
	 >> / Tune+		 4
	 Guide / EPG / -/--		 5
	 Up		 6
	 Text / Goto		 7
	 Left		 8
	 Right		 9
	 OK		 0
	 Down		 Fav / Marker / PC
	 Menu / Home		

