













Original	Replacement
Standby	Power
Info	Info / Angle
Subtitle	Subtitle / EQ
Mute	Mute / Dimmer
CH+	CH+ / Page+
Recall	Back / Return
Vol+	Vol+
CH-	CH- / Page-
Pause	Pause / Step / Freeze
Vol-	Vol-
Menu	Menu / Home
Up	Up
Exit	Exit / Cancel / Clear
Left	Left
OK	OK
Right	Right
EPG	Guide / EPG / -/-

Original	Replacement
Down	Down
FAV	Fav / Marker / PC
1	1
2	2
3	3
Page+	Shift + CH+ /
4	4
5	5
6	6
Page-	Shift + CH- /
7	7
8	8
9	9
0	0
Audio	Audio / Lang I/II
Lang	Shift + Audio / Lang I/II
Tv/Radio	TV/Radio /





Original		Replacement	
	TTX		Text / Goto
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Original		Replacement	

