
 


 


 
 




Original	Replacement
 Standby	 Power
 OSD	 Display / Media
 Mute	 Mute / Dimmer
 Open/Close	 Eject / Surround
 Video	 Shift + 4
 1	 1
 2	 2
 3	 3
 Return	 Back / Return
 4	 4
 5	 5
 6	 6
 Default	 Smart / List
 7	 7
 8	 8
 9	 9
 Clear	 Exit / Cancel / Clear

Original	Replacement
 Goto	 Text / Goto
 0	 0
 10+	 Guide / EPG / -/--
 Prog	 TV/Radio /
 Mark	 Fav / Marker / PC
 Menu/PBC	 Menu / Home
 Title	 Sound / Title
 N/P	 Red / Netflix / Search
 Up	 Up
 Setup	 Setup / OPT /
 Left	 Left
 Enter	 OK
 Right	 Right
 Play	 Play / Slow
 Down	 Down
 Zoom	 Zoom / Size
 I<<	 I<< / Preset-





Original	Replacement	Original	Replacement
>>I	>>I / Preset+		
<<	<< / Tune-		
>>	>> / Tune+		
PAUSE	Pause / Step / Freeze		
ANGLE	Info / Angle		
LANG/L/R	Audio / Lang I/II		
SUB-T	Subtitle / EQ		
STOP	Stop / Hold		
RANDOM	Blue / Prime Video / Random		
A-B	Yellow / YouTube / Repeat		
REPEAT	Green / APP / Repeat		
STEP	Shift + Pause / Step /		
SLOW	Shift + Play /		
VOL-	Vol-		
VOL+	Vol+		

