

 




 

 


 
 

 
 
 












 






 


Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	FAV		Fav / Marker / PC
	0		0
	List		Shift + Smart / List
	Vol+		Vol+
	TV		TV/Radio /
	P+		CH+ / Page+

Original	Replacement	Original	Replacement
	Vol-		Vol-
	Smart		Smart / List
	P-		CH- / Page-
	Home		Shift + Menu /
	Up		Up
	=		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	←		Back / Return
	Down		Down
	Source		AV / Input / RDS
	Exit		Exit / Cancel / Clear
	Zoom		Zoom / Size
	*		D.Menu / Top
	Info		Info / Angle
	EPG		Guide / EPG / -/-





Original	Replacement
 Lang/AD	 Audio / Lang I/II
 USB	 +  Shift + 8
 Subt.	 Subtitle / EQ
 Text	 Text / Goto
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 <<	 << / Tune-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 I<	 I<< / Preset-
 Stop	 Stop / Hold
 >I	 >>I / Preset+
 Rec	 Rec / Rec Mode
 Netflix	 +  Shift + Red / Netflix / Search

Original	Replacement
 YouTube	 +  Shift + Yellow / YouTube /

