

 


 







 



 











 

 


 

 
 

 





 
 













 
 



 

 






Original	Replacement	Original	Replacement
 Tv/Rad	 TV/Radio /	 A/V+	 AV / Input / RDS
 Input/Text	 Text / Goto	 Yellow	 Yellow / YouTube / Repeat
 1	 1	 FAV	 Fav / Marker / PC
 2	 2	 Blue/A-Z	 Blue / Prime Video / Random
 3	 3	 EPG	 Guide / EPG / -/-
 4	 4	 Info	 Info / Angle
 5	 5	 Menu	 Menu / Home
 6	 6	 Exit	 Exit / Cancel / Clear
 7	 7	 P-	 CH- / Page-
 8	 8	 P+	 CH+ / Page+
 9	 9	 Play	 Play / Slow
 0	 0	 Pause	 Pause / Step / Freeze
 Mute	 Mute / Dimmer	 <<	 << / Tune-
 Back	 Back / Return	 Stop	 Stop / Hold
 Red	 Red / Netflix / Search	 >>	 >> / Tune+
 Opt.	 Setup / OPT /	 Rec	 Rec / Rec Mode
 Green	 Green / APP / Repeat	 List	 Smart / List





Original	Replacement	Original	Replacement
	I>/Slow		Display / Media
	A-B		Shift + Yellow / YouTube /
	Mark		Shift + Fav / Marker / PC
	PIP		Zoom / Size
	Jump		Picture / Format
	Movie		Eject / Surround
	Up		Up
	Swap		D.Menu / Top
	Down		Down
	Right		Right
	Left		Left
	1 TV		Shift + 1
	2 TV		Shift + 2
	3 TV		Shift + 3
	4 TV		Shift + 4
	5 TV		Shift + 5
	6 TV		Shift + 6

Original	Replacement	Original	Replacement
	7 TV		Shift + 7
	8 TV		Shift + 8
	9 TV		Shift + 9
	0 TV		Shift + 0
	Mute TV		Shift + Mute / Dimmer
	Input/Text TV		Shift + Text /
	P+ TV		Shift + CH+ /
	P- TV		Shift + CH- /
	Vol-		Vol-
	Vol- TV		Shift + Vol-
	Sleep		Sleep / Timer
	Power Tv		Shift + Power
	Vol+ TV		Shift + Vol+
	Power		Power
	OK		OK
	Vol+		Vol+

