

















 















 











 



 



 



 



 









| Original | | Replacement | | Original | | Replacement | |
|---|----------------|---|-----------------------------|---|------------------|---|------------------------|
|  | VTR |  | Power |  | AV Link |  | TV/Radio / |
|  | Scanner On/Off |  | Setup / OPT / |  | Input Select |  | AV / Input / RDS |
|  | Transmit |  | Smart / List |  | I<< Index |  | I<< / Preset- |
|  | Pause/Still |  | Pause / Step / Freeze |  | Index >>I |  | >>I / Preset+ |
|  | Stop |  | Stop / Hold |  | Tracking/V-Lock- |  | CH- / Page- |
|  | Still Adv |  | Blue / Prime Video / Random |  | Tracking/V-Lock+ |  | CH+ / Page+ |
|  | << |  | << / Tune- |  | Repeat |  | Green / APP / Repeat |
|  | Play |  | Play / Slow |  | Zero Stop |  | Text / Goto |
|  | >> |  | >> / Tune+ |  | Time Search |  | Red / Netflix / Search |
|  | Rec |  | Rec / Rec Mode |  | Audio Out |  | Audio / Lang I/II |
|  | - |  | Left |  | 1 |  | 1 |
|  | Search |  | OK |  | 2 |  | 2 |
|  | + |  | Right |  | 3 |  | 3 |
|  | Clock/Counter |  | Fav / Marker / PC |  | 4 |  | 4 |
|  | Tape Remain |  | Display / Media |  | 5 |  | 5 |
|  | Reset |  | Exit / Cancel / Clear |  | 6 |  | 6 |
|  | Monitor |  | D.Menu / Top |  | Recording SP/LP |  | Picture / Format |





| Original | Replacement | Original | Replacement |
|----------|-------------|----------|--------------------|
| | 7 | | 7 |
| | 8 | | 8 |
| | 9 | | 9 |
| | 0 | | 0 |
| | -/-- | | Guide / EPG / -/-- |
| | Timer Rec | | Sleep / Timer |
| | Pal/Mesecam | | Zoom / Size |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |





| Original | | Replacement | | Original | | Replacement | |
|----------|----------------|-------------|---------------------------|----------|------------------|-------------|-----------------------|
| | VTR | | Power | | Index >>I | | >>I / Preset+ |
| | Scanner On/Off | | TV/Radio / | | Tracking/V-Lock- | | CH- / Page- |
| | Transmit | | Setup / OPT / | | Tracking/V-Lock+ | | CH+ / Page+ |
| | Pause/Still | | Pause / Step / Freeze | | Repeat | | Green / APP / Repeat |
| | Stop | | Stop / Hold | | Zero Stop | | Exit / Cancel / Clear |
| | Still Adv | | Yellow / YouTube / Repeat | | Audio Out | | Mute / Dimmer |
| | << | | << / Tune- | | 1 | | 1 |
| | Play | | Play / Slow | | 2 | | 2 |
| | >> | | >> / Tune+ | | 3 | | 3 |
| | Rec | | Rec / Rec Mode | | 4 | | 4 |
| | Search | | Left | | 5 | | 5 |
| | + | | Red / Netflix / Search | | 6 | | 6 |
| | Reset | | Right | | Recording LP/SP | | Picture / Format |
| | AV Link | | Back / Return | | 7 | | 7 |
| | Input Select | | AV / Input / RDS | | 8 | | 8 |
| | I<< Index | | Smart / List | | 9 | | 9 |
| | | | I<< / Preset- | | 0 | | 0 |





| | Original | Replacement | Original | Replacement |
|--|-----------|--------------------|----------|-------------|
| | -/-- | Guide / EPG / -/-- | | |
| | Timer Rec | Text / Goto | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

