























































 






 









 





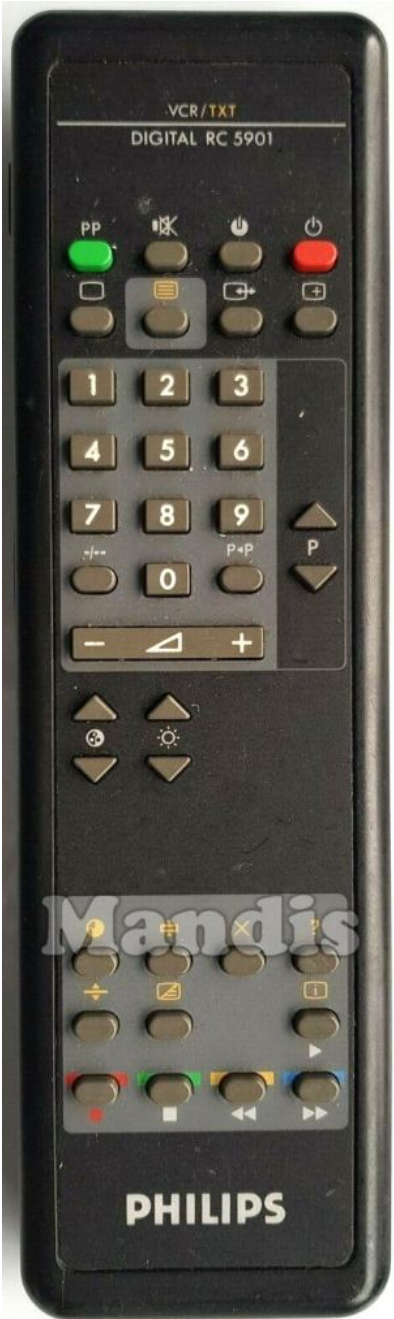
Original	Replacement	Original	Replacement
 PP	 Back / Return	 P+	 CH+ / Page+
 Mute	 Mute / Dimmer	 -/--	 Guide / EPG / -/--
 (I)	 OK	 0	 0
 Power	 Power	 P<P	 Fav / Marker / PC
 []	 Display / Media	 P-	 CH- / Page-
 [=]	 Text / Goto	 Vol-	 Vol-
 [↔]	 AV / Input / RDS	 Vol+	 Vol+
 [+]	 Smart / List	 Colour+	 Right
 1	 1	 Brightness-	 Down
 2	 2	 Colour-	 Left
 3	 3	 Brightness+	 Up
 4	 4	 ●	 Setup / OPT /
 5	 5	 □	 Stop / Hold
 6	 6	 X	 Exit / Cancel / Clear
 7	 7	 [?]	 D.Menu / Top
 8	 8	 ◆	 Zoom / Size
 9	 9	 [/ =]	 Sleep / Timer










































































Original	Replacement	Original	Replacement
	 Info / Angle		
	 Red / Netflix / Search		
	 Green / APP / Repeat		
	 Yellow / YouTube / Repeat		
	 Blue / Prime Video / Random		







Original		Replacement		Original		Replacement	
	PP		Back / Return		-/--		Guide / EPG / -/--
	Mute		Mute / Dimmer		0		0
	(I)		OK		P<P		Fav / Marker / PC
	Power		Power		P-		CH- / Page-
	[]		Display / Media		Vol-		Vol-
	[↔]		AV / Input / RDS		Vol+		Vol+
	[+]		Smart / List		●		Setup / OPT /
	1		1		□		TV/Radio /
	2		2		X		Exit / Cancel / Clear
	3		3		?		D.Menu / Top
	4		4		Size		Zoom / Size
	5		5		[=]		Text / Goto
	6		6		[/=]		Sleep / Timer
	7		7		Play		Play / Slow
	8		8		Rec		Rec / Rec Mode
	9		9		Stop		Stop / Hold
	P+		CH+ / Page+		<<		<< / Tune-

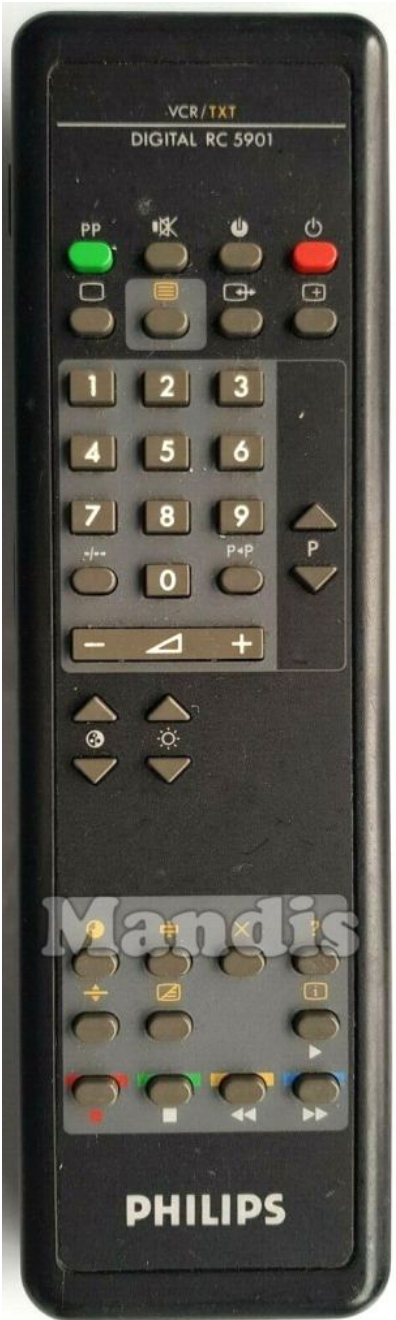



Original	Replacement	Original	Replacement
	 >> / Tune+		

