



Original	Replacement	Original	Replacement
Power	Power	Return	Back / Return
Open/Close	Eject / Surround	Setup	Setup / OPT /
1	1	Up	Up
2	2	Title	Sound / Title
3	3	Left	Left
Tv-Mode	Picture / Format	Enter	OK
4	4	Right	Right
5	5	Menu	Menu / Home
6	6	Down	Down
7	7	Audio	Audio / Lang I/II
8	8	N/P	Smart / List
9	9	Zoom	Zoom / Size
10/0	0	Step	Shift + Pause / Step /
10+	Guide / EPG / -/--	Vol+	Vol+
Dvd/Usb	AV / Input / RDS	Vol-	Vol-
Display	Display / Media	I<<	I<< / Preset-
PBC	Fav / Marker / PC	>>I	>>I / Preset+



