



| Original | Replacement |
|----------|-----------------------------|
| | Smart / List |
| | Display / Media |
| | Sleep / Timer |
| | Power |
| | Blue / Prime Video / Random |
| | Green / APP / Repeat |
| | Red / Netflix / Search |
| | Yellow / YouTube / Repeat |
| | Rec / Rec Mode |
| | Up |
| | Menu / Home |
| | Left |
| | OK |
| | Right |
| | Back / Return |
| | Down |
| | Setup / OPT / |

| Original | Replacement |
|----------|-----------------------|
| | D.Menu / Top |
| | Sound / Title |
| | Audio / Lang I/II |
| | << / Tune- |
| | Play / Slow |
| | >> / Tune+ |
| | I<< / Preset- |
| | Pause / Step / Freeze |
| | Stop / Hold |
| | >>I / Preset+ |
| | Mute / Dimmer |
| | Vol+ |
| | CH+ / Page+ |
| | TV/Radio / |
| | Vol- |
| | CH- / Page- |



Tools