 






 












 










 






 

 

 
 


















	Original	Replacement		Original	Replacement
	Vol-	 Vol-		>>I CD	 >>I / Preset+
	Vol+	 Vol+		Stop CD	 Stop / Hold
	Sleep	 Sleep / Timer		Play CD	 Play / Slow
	Power	 Power		Pause CD	 Pause / Step / Freeze
	Karaoke	 Smart / List		<< Tape I	 << / Tune-
	SFC	 Picture / Format		>> Tape I	 >> / Tune+
	P.Bass	 Sound / Title		Stop Tape I	 Shift + Stop /
	Display	 Display / Media		<> Tape I	 Shift + Play /
	AUX	 7		<< Tape II	 Left
	Disc 1	 1		>> Tape II	 Right
	Disc 2	 2		Stop Tape I	 Down
	Disc 3	 3		<> Tape II	 Up
	Clear	 Exit / Cancel / Clear		Station Down	 CH- / Page-
	PGM	 Setup / OPT /		Station Up	 CH+ / Page+
	Repeat	 Green / APP / Repeat		Mono	 Audio / Lang I/II
	Random	 Blue / Prime Video / Random		Band	 TV/Radio /
	I<< CD	 I<< / Preset-			

