



Original	Replacement
	Power
	Source
	1
	2
	3
	4
	5
	6
	7
	8
	9
	TTX/MIX
	0
	PRE-CH
	Vol+
	Mute
	CH+

Original	Replacement
	Vol-
	CH List
	CH-
	Netflix
	Home
	prime video
	Samsung TV
	Up
	Disney+
	Left
	Enter
	Right
	Return
	Down
	Exit
	Red
	Green





Original	Replacement	Original	Replacement
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Settings	 Setup / OPT /		
 Info	 Info / Angle		
 AD/SUBT.	 Subtitle / EQ		
 Stop	 Stop / Hold		
 <<	 << / Tune-		
 I<<	 I<< / Preset-		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 >>	 >> / Tune+		
 >>I	 >>I / Preset+		

Original	Replacement	Original	Replacement

