












 


 


 


 











 








 





 













Original	Replacement
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TTX/MIX	 Text / Goto
 0	 0
 PRE-CH	 Fav / Marker / PC
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+

Original	Replacement
 Vol-	 Vol-
 CH List	 Smart / List
 CH-	 CH- / Page-
 Netflix	 Shift + Red / Netflix /
 Home	 Menu / Home
 prime video	 Shift + Blue / Prime
 WWW	 Display / Media
 Up	 Up
 Guide	 Guide / EPG / -/-
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Original		Replacement		Original		Replacement	
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	Settings		Setup / OPT /				
	Info		Info / Angle				
	AD/SUBt.		Subtitle / EQ				
	Stop		Stop / Hold				
	<<		<< / Tune-				
	I<<		I<< / Preset-				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	>>		>> / Tune+				
	>>I		>>I / Preset+				

