



























 




































 






Original	Replacement	Original	Replacement
	Power		Power
	Power VCR		Shift + Power
	Mute		Mute / Dimmer
	Tv Source		AV / Input / RDS
	TXT		Text / Goto
	1		1
	2		2
	3		3
	Reveal		Setup / OPT /
	4		4
	5		5
	6		6
	List		Smart / List
	7		7
	8		8
	9		9
	Size		Zoom / Size
	P+P		Fav / Marker / PC
	0		0
	-/--/Space		Guide / EPG / -/--
	F[...]		Subtitle / EQ
	Up		Up
	Cancel		Exit / Cancel / Clear
	Left		Left
	Menu		Menu / Home
	Index		OK
	Right		Right
	Down		Down
	Vol+		Vol+
	P+		CH+ / Page+
	Vol-		Vol-
	P-		CH- / Page-
	Red/Surround		Red / Netflix / Search
	Green		Green / APP / Repeat





Original	Replacement	Original	Replacement
	Yellow/Bass		Yellow / YouTube / Repeat
	Blue/Timer		Blue / Prime Video / Random
	A-B		Audio / Lang I/II
	Wide		Picture / Format
	TV/Radio		TV/Radio /
	Recall		Back / Return
	PIP Mode		Shift + TV/Radio / Program
	PIP Swap		Shift + Zoom /
	PIP On		Sleep / Timer
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Stop		Shift + Stop /
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+

