











































 











Original	Replacement	Original	Replacement
 Mute	 Mute / Dimmer	 Menu	 Menu / Home
 Power	 Power	 Exit	 Exit / Cancel / Clear
 TV	 Smart / List	 EPG	 Guide / EPG / -/-
 Tv/Rad	 TV/Radio /	 ALT	 Setup / OPT /
 Audio	 Audio / Lang I/II	 Up	 Up
 1	 1	 CH+	 CH+ / Page+
 2	 2	 Left	 Left
 3	 3	 Vol-	 Vol-
 4	 4	 OK	 OK
 5	 5	 Vol+	 Vol+
 6	 6	 Right	 Right
 7	 7	 Down	 Down
 8	 8	 CH-	 CH- / Page-
 9	 9	 Freeze	 Pause / Step / Freeze
 Text	 Text / Goto	 Page-	 Shift + CH- /
 0	 0	 Page+	 Shift + CH+ /
 Sub	 Subtitle / EQ	 Browse	 Display / Media





Original	Replacement	Original	Replacement
	Red  Red / Netflix / Search		
	Green  Green / APP / Repeat		
	Yellow  Yellow / YouTube / Repeat		
	Blue  Blue / Prime Video / Random		
	i  Info / Angle		

