



Original	Replacement	Original	Replacement
Pause	Pause / Step / Freeze	Power	Power
Mute	Mute / Dimmer	1	1
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
FAV	Fav / Marker / PC	0	0
Recall	Back / Return	Digest	Display / Media
Tv Mode	Smart / List		

Original	Replacement	Original	Replacement
Info	Info / Angle	Menu	Menu / Home
EPG	Guide / EPG / -/-	Exit	Exit / Cancel / Clear
Left	Left	Vol-	Vol-
CH+	CH+ / Page+	Up	Up
Right	Right	Vol+	Vol+
OK	OK	Down	Down
CH-	CH- / Page-	Red	Red / Netflix / Search
Language	Shift + Audio / Lang I/II	Green	Green / APP / Repeat
Audio	Audio / Lang I/II		



