



 
 
 
 

 

 



 



 


 

 

 

 
 

 

 

 

 





 
 

 
 
 

 












| Original | Replacement |
|--|---|
|  Tv Input |  AV / Input / RDS |
|  One Touch Play |  Exit / Cancel / Clear |
|  Power Tv |  +  Shift + Power |
|  Power |  Power |
|  DVD/CD |  Red / Netflix / Search |
|  1 |  1 |
|  FM |  Green / APP / Repeat |
|  2 |  2 |
|  USB |  +  Shift + 8 |
|  3 |  3 |
|  Tv/Cable |  Blue / Prime Video / Random |
|  4 |  4 |
|  Audio In |  Guide / EPG / -/-- |
|  5 |  5 |
|  Function |  Fav / Marker / PC |
|  6 |  6 |
|  Repeat |  Back / Return |

| Original | Replacement |
|--|---|
|  7 |  7 |
|  Surround |  Eject / Surround |
|  8 |  8 |
|  EQ |  +  Shift + Subtitle / EQ |
|  9 |  9 |
|  Audio |  Audio / Lang I/II |
|  Program |  TV/Radio / |
|  Subtitle |  Subtitle / EQ |
|  0 |  0 |
|  Angle |  Info / Angle |
|  Sleep |  Sleep / Timer |
|  DVD Top Menu |  +  Shift + Display / Media |
|  DVD Menu |  D.Menu / Top |
|  Muting |  Mute / Dimmer |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |





| Original | Replacement | Original | Replacement |
|---|-------------|---|-----------------------|
|  | Right |  | Right |
|  | Vol+ |  | Vol+ |
|  | Setup |  | Setup / OPT / |
|  | Down |  | Down |
|  | Display |  | Display / Media |
|  | Time |  +  | Shift + Sleep / Timer |
|  | Vol- |  | Vol- |
|  | I<</Preset- |  | I<< / Preset- |
|  | Pause |  | Pause / Step / Freeze |
|  | >>I/Preset+ |  | >>I / Preset+ |
|  | <</Tuning- |  | << / Tune- |
|  | Play |  | Play / Slow |
|  | >>/Tuning+ |  | >> / Tune+ |
|  | Stop |  | Stop / Hold |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

