





















 

 












Original	Replacement	Original	Replacement
Standby/On	Power	Up/PTY Select	Up
Sleep	Sleep / Timer	P.Scan	Smart / List
Video 1	Shift + 4	Left/EON TA	Left
Video 2	Shift + 8	Enter/RDS	OK
Video 3	Shift + 9	Right/EON PTY	Right
EXT In	Shift + 2	Repeat 1/All	Green / APP / Repeat
Tuner	Shift + 6	Down/Search	Down
CD	Shift + 3	Dimmer	Shift + Mute / Dimmer
AUX	Shift + 7	<<	<< / Tune-
Tape	Shift + 5	>>	>> / Tune+
Level+	CH+ / Page+	I<<	I<< / Preset-
CH Sel	Fav / Marker / PC	Stop	Stop / Hold
Volume+	Vol+	>>I	>>I / Preset+
Level-	CH- / Page-	Pause	Pause / Step / Freeze
Muting	Mute / Dimmer	Play	Play / Slow
Volume-	Vol-	Auto	D.Menu / Top
T.Tone	Display / Media	< DSP	Shift + Left





Original		Replacement		Original		Replacement	
	DSP >	 + 	Shift + Right		Dynamic Range		Eject / Surround
	Stereo		Audio / Lang I/II		PAL/NTSC		Picture / Format
	SP Setup		Setup / OPT /				
	< Select	 + 	Shift + << /				
	Select >	 + 	Shift + >> /				
	Parameter		Red / Netflix / Search				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Cinema EQ		Subtitle / EQ				

