







 

























Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Lang	 Audio / Lang I/II
 0	 0
 TXT	 Text / Goto
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+
 Vol-	 Vol-

Original	Replacement
 Source	 AV / Input / RDS
 P-	 CH- / Page-
 Home	 Menu / Home
 Guide	 Guide / EPG / -/-
 i	 Info / Angle
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Back	 Back / Return
 Exit	 Exit / Cancel / Clear
 Netflix	 Shift + Red / Netflix /
 YouTube	 Shift + Yellow / YouTube /
 *1	 Display / Media
 prime video	 Shift + Blue / Prime
 Red	 Red / Netflix / Search





Original	Replacement	Original	Replacement
	Green  Green / APP / Repeat		
	Yellow  Yellow / YouTube / Repeat		
	Blue  Blue / Prime Video / Random		
	<<  << / Tune-		
	Pause  Pause / Step / Freeze		
	>>  >> / Tune+		
	Rec  Rec / Rec Mode		
	Play  Play / Slow		
	Stop  Stop / Hold		

Original	Replacement	Original	Replacement

