
 





 



 







 

 


 


 



 







 





 


 





Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol+
 Energy Saving	 Text / Goto	 FAV/Mark	 Fav / Marker / PC
 AV Mode	 Picture / Format	 CH+	 CH+ / Page+
 Input	 AV / Input / RDS	 Vol-	 Vol-
 Tv/Rad	 TV/Radio /	 Ratio	 Eject / Surround
 1	 1	 CH-	 CH- / Page-
 2	 2	 Mute	 Mute / Dimmer
 3	 3	 Guide	 Guide / EPG / -/-
 4	 4	 Home	 Menu / Home
 5	 5	 Q.Menu	 D.Menu / Top
 6	 6	 Up	 Up
 7	 7	 Left	 Left
 8	 8	 Enter	 OK
 9	 9	 Right	 Right
 List	 Smart / List	 Down	 Down
 0	 0	 Back	 Back / Return
 Q.View	 Setup / OPT /	 Info	 Info / Angle





Original	Replacement
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause/Freeze	 Pause / Step / Freeze
 <<	 << / Tune-
 >>	 >> / Tune+
 Simplink	 Display / Media
 Subtitle	 Subtitle / EQ

Original	Replacement

