

 

 








 

























Original	Replacement	Original	Replacement
Power	Power	TV/AV	AV / Input / RDS
Open/Close	Eject / Surround	P+	CH+ / Page+
Scan	Display / Media	TV/DVD	Smart / List
Swap	Back / Return	V-	Vol-
Call	Shift + OK	Menu	Menu / Home
Mute	Mute / Dimmer	V+	Vol+
1	1	Exit	Exit / Cancel / Clear
2	2	P-	CH- / Page-
3	3	P.STD	Picture / Format
4	4	Red/Picture	Shift + Picture / Format
5	5	Red/Picture	Red / Netflix / Search
6	6	Green/Sound	Sound / Title
7	7	Green/Sound	Green / APP / Repeat
8	8	Yellow/Time	Yellow / YouTube / Repeat
9	9	Blue/Function	Blue / Prime Video / Random
0	0	<<	<< / Tune-
-/--	Guide / EPG / -/--	>>	>> / Tune+

Original	Replacement	Original	Replacement
Power	Power	TV/AV	AV / Input / RDS
Open/Close	Eject / Surround	P+	CH+ / Page+
Scan	Display / Media	TV/DVD	Smart / List
Swap	Back / Return	V-	Vol-
Call	Shift + OK	Menu	Menu / Home
Mute	Mute / Dimmer	V+	Vol+
1	1	Exit	Exit / Cancel / Clear
2	2	P-	CH- / Page-
3	3	P.STD	Picture / Format
4	4	Red/Picture	Shift + Picture / Format
5	5	Red/Picture	Red / Netflix / Search
6	6	Green/Sound	Sound / Title
7	7	Green/Sound	Green / APP / Repeat
8	8	Yellow/Time	Yellow / YouTube / Repeat
9	9	Blue/Function	Blue / Prime Video / Random
0	0	<<	<< / Tune-
-/--	Guide / EPG / -/--	>>	>> / Tune+





	Original	Replacement	Original	Replacement
	I<<	 I<< / Preset-		
	>>I	 >>I / Preset+		
	Tune	 +  Shift + TV/Radio / Program		
	Up	 Up		
	Down	 Down		
	Program	 TV/Radio /		
	Zoom	 Zoom / Size		
	D.Call	 Info / Angle		
	[♦]	 +  Shift + Zoom /		
	[-]	 D.Menu / Top		
	[/ =]	 +  Shift + Text /		
	[=]	 Text / Goto		
	[X]	 +  Shift + Exit / Cancel / Clear		
	[?]	 Setup / OPT /		
	[+]	 Subtitle / EQ		
	Timer	 Sleep / Timer		
	>	 Right		





Original	Replacement
Power	Power
Open / Close	Eject / Surround
Scan	Shift + Setup / OPT / Tools
Swap	Back / Return
Call	Smart / List
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	Guide / EPG / -/--

Original	Replacement
TV/AV	AV / Input / RDS
I-II	Shift + Audio / Lang I/II
P+	CH+ / Page+
TV/DVD	Shift + 2
TV/DVD	Shift + 1
V-	Vol-
Menu	Menu / Home
V+	Vol+
Exit	Exit / Cancel / Clear
P-	CH- / Page-
P.Std	Picture / Format
Red / Picture	Red / Netflix / Search
Red / Picture	Shift + Picture / Format
Green / Sound	Green / APP / Repeat
Green / Sound	Shift + Sound / Title
Yellow / Time	Yellow / YouTube / Repeat
Yellow / Time	Sleep / Timer





Original	Replacement
Blue / Function	Blue / Prime Video / Random
Rev	<< / Tune-
Fwd	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
Stop	Stop / Hold
Setup	Setup / OPT /
Pause / Step	Pause / Step / Freeze
White / Tune	Display / Media
D.Menu	D.Menu / Top
Up	Up
Repeat	Shift + Green / APP /
A-B	Shift + Yellow / YouTube /
Left	Left
Play / Enter	Play / Slow
Play / Enter	OK
Right	Right

Original	Replacement
Slow	Shift + Play /
Angle	Info / Angle
Down	Down
Title / PBC	Sound / Title
Search	Shift + Red / Netflix /
Audio	Audio / Lang I/II
Program	TV/Radio /
Zoom	Zoom / Size
D.Call	Shift + Smart / List
10+	Shift + Guide / EPG / -/-
Caption	Subtitle / EQ
Hold	Shift + Stop /
[-]	Shift + TV/Radio / Program
Mix	Shift + Text /
Text	Text / Goto
[X]	Shift + Exit / Cancel / Clear
Reveal	Shift + Sleep / Timer





Original	Replacement
Size	Shift + Zoom /
Subcode	Shift + Subtitle / EQ
>	Shift + Eject / Surround

Original	Replacement

