



| Original | Replacement | Original | Replacement |
|----------|-------------|----------|------------------------|
| | Power | | Power |
| | Muting | | Mute / Dimmer |
| | Power On | | Play / Slow |
| | Power Off | | Pause / Step / Freeze |
| | I<< | | I<< / Preset- |
| | >>I | | >>I / Preset+ |
| | Bass Boost | | Sound / Title |
| | EQ / Tone | | Subtitle / EQ |
| | Sleep | | Sleep / Timer |
| | Band | | TV/Radio / |
| | Effect | | Setup / OPT / |
| | Test Tone | | Text / Goto |
| | Menu | | Menu / Home |
| | Up | | Up |
| | Left | | Left |
| | Cursor Mode | | OK |
| | Right | | Right |
| | Down | | Down |
| | Master Vol+ | | Vol+ |
| | D.Tuning | | Smart / List |
| | Master Vol- | | Vol- |
| | On Screen | | Display / Media |
| | 1 | | 1 |
| | 2 | | 2 |
| | 3 | | 3 |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | 7 | | 7 |
| | 8 | | 8 |
| | 9 | | 9 |
| | Shift | | Guide / EPG / -/-- |
| | 0 | | 0 |
| | Vol Center- | | Red / Netflix / Search |





| Original | Replacement | Original | Replacement |
|-------------|-----------------------------|----------|-------------|
| Vol Center+ | Green / APP / Repeat | | |
| Vol Rear- | Yellow / YouTube / Repeat | | |
| Vol Rear+ | Blue / Prime Video / Random | | |
| TV - SAT | + Shift + 1 | | |
| DVD | + Shift + 2 | | |
| CD | + Shift + 3 | | |
| Video 1 | + Shift + 4 | | |
| Tape | + Shift + 5 | | |
| Video 2 | + Shift + 7 | | |
| Video 3 | + Shift + 8 | | |
| Phono | + Shift + 9 | | |
| MD | + Shift + 0 | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

