



Original	Replacement	Original	Replacement
 Power	 Power	 Time	 Sleep / Timer
 Open/Close	 Eject / Surround	 Title	 Sound / Title
 OSD	 Display / Media	 Up	 Up
 1	 1	 Menu	 Menu / Home
 2	 2	 Left	 Left
 3	 3	 Enter	 OK
 Step	 Shift + Pause / Step /	 Right	 Right
 4	 4	 Setup	 Setup / OPT /
 5	 5	 Down	 Down
 6	 6	 Zoom	 Zoom / Size
 DVD/USB	 AV / Input / RDS	 I<< / Preset-	 I<< / Preset-
 7	 7	 L/R	 Red / Netflix / Search
 8	 8	 N/P	 Blue / Prime Video / Random
 9	 9	 << / Tune-	 << / Tune-
 Mute	 Mute / Dimmer	 Vol-	 Vol-
 0/10	 0	 Vol+	 Vol+
 10+	 Guide / EPG / -/--	 >>I / Preset+	 >>I / Preset+

Original	Replacement	Original	Replacement
 Power	 Mute / Dimmer	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 Play	 Pause	 PRESET-	 PRESET+
 TUNE-	 TUNE+	 EQ	 SURROUND
 TITLE	 LANG	 SUBTITLE	 PROGRAM
 SOUND	 AUDIO	 TIMER	 TV RADIO
 FORMAT	 ZOOM	 SLEEP	 RDS
 PICTURE	 OPT-TOOLS	 GOTO	 AV INPUT
 TOP MENU	 D.MENU	 SETUP	 TEXT
 HOME	 ANGLE	 INFO	
 MENU	 OK	 RETURN	 BACK
 CLEAR	 EXIT	 CANCEL	 LIST
 VOL+	 SMART	 MEDIA	 CH PAGE
 VOL-	 DISPLAY	 TV	 DVD
 1	 TAPE	 CD - BTB	 TUNER
 4	 AUX - HDD	 USB	 BLUETOOTH
 5	 HDMI - BAT	 FC	
7	GUIDE EPG	FAV MARKER	
8	NETFLIX	APP	YouTube
9	SEARCH	REPEAT	REPEAT A-B
0	RANDOM		



