








 



 





 


















 










Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol+
 Sub-T	 Subtitle / EQ	 FAV	 Fav / Marker / PC
 Lang	 Audio / Lang I/II	 Down/CH-	 Down
 Mute	 Mute / Dimmer	 Tv/Radio	 TV/Radio /
 EPG	 Guide / EPG / -/--	 1	 1
 Goto	 Shift + Text /	 2	 2
 Page+	 CH+ / Page+	 3	 3
 TTX	 Text / Goto	 Recall	 Back / Return
 Repeat	 Shift + Green / APP /	 4	 4
 Page-	 CH- / Page-	 5	 5
 Menu	 Menu / Home	 6	 6
 Up/CH+	 Up	 Info	 Info / Angle
 Exit	 Exit / Cancel / Clear	 7	 7
 Vol-	 Vol-	 8	 8
 Left	 Left	 9	 9
 OK	 OK	 0	 0
 Right	 Right	 <<	 << / Tune-





Original	Replacement	Original	Replacement
 >>	 >> / Tune+		
 I<<	 I<< / Preset-		
 >>I	 >>I / Preset+		
 Play	 Play / Slow		
 Pause/Time Shift	 Pause / Step / Freeze		
 Stop	 Stop / Hold		
 Rec	 Rec / Rec Mode		
 Red/PVR	 Red / Netflix / Search		
 Green/V-Format	 Green / APP / Repeat		
 Yellow/Aspect	 Yellow / YouTube / Repeat		
 Blue/Timer	 Blue / Prime Video / Random		

Original	Replacement	Original	Replacement

