























 















































Original	Replacement
Power	Power
Sub-T	Subtitle / EQ
Lang	Audio / Lang I/II
Mute	Mute / Dimmer
EPG	Guide / EPG / -/--
Goto	Shift + Text /
Page+	CH+ / Page+
TTX	Text / Goto
Repeat	Shift + Green / APP /
Page-	CH- / Page-
Menu	Menu / Home
Up/CH+	Up
Exit	Exit / Cancel / Clear
Vol-	Vol-
Left	Left
OK	OK
Right	Right

Original	Replacement
Vol+	Vol+
FAV	Fav / Marker / PC
Down/CH-	Down
Tv/Radio	TV/Radio /
1	1
2	2
3	3
Recall	Back / Return
4	4
5	5
6	6
Info	Info / Angle
7	7
8	8
9	9
0	0
Right	<< / Tune-





Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol+
 Sub-T	 Subtitle / EQ	 FAV	 Fav / Marker / PC
 Lang	 Audio / Lang I/II	 Down/CH-	 Down
 Mute	 Mute / Dimmer	 Tv/Radio	 TV/Radio /
 EPG	 Guide / EPG / -/--	 1	 1
 Goto	 Shift + Text /	 2	 2
 Page+	 CH+ / Page+	 3	 3
 TTX	 Text / Goto	 Recall	 Back / Return
 Repeat	 Shift + Green / APP /	 4	 4
 Page-	 CH- / Page-	 5	 5
 Menu	 Menu / Home	 6	 6
 Up/CH+	 Up	 Info	 Info / Angle
 Exit	 Exit / Cancel / Clear	 7	 7
 Left	 Left	 8	 8
 Vol-	 Vol-	 9	 9
 OK	 OK	 0	 0
 Right	 Right	 <<	 << / Tune-



