




Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol-
	Mute		Mute / Dimmer		EPG		Guide / EPG / -/-
	1		1		CH-		CH- / Page-
	2		2		Exit		Exit / Cancel / Clear
	3		3		Up		Up
	4		4		Menu		Menu / Home
	5		5		Left		Left
	6		6		OK		OK
	7		7		Right		Right
	8		8		Setup		Setup / OPT /
	9		9		Down		Down
	RES		Picture / Format		Back		Back / Return
	0		0		Red		Red / Netflix / Search
	DEL		Fav / Marker / PC		Green		Green / APP / Repeat
	Vol+		Vol+		Yellow		Yellow / YouTube / Repeat
	Disp		Display / Media		Blue		Blue / Prime Video / Random
	CH+		CH+ / Page+		Play		Play / Slow



