



Original	Replacement	Original	Replacement
 Power DVD	 Power	 Tv/Video	 TV/Radio /
 Power Tv	 +  Shift + Power	 Vol+	 Vol+
 1	 1	 CH+	 CH+ / Page+
 2	 2	 Open/Close	 Eject / Surround
 3	 3	 Video Sel.	 +  Shift + 4
 4	 4	 Vol-	 Vol-
 5	 5	 CH-	 CH- / Page-
 6	 6	 HDMI Sel.	 +  Shift + 0
 7	 7	 <<	 << / Tune-
 8	 8	 >>	 >> / Tune+
 9	 9	 Stop	 Stop / Hold
 Prog	 +  Shift + TV/Radio / Program	 Play	 Play / Slow
 0	 0	 Pause	 Pause / Step / Freeze
 Clear	 Exit / Cancel / Clear	 I<<	 I<< / Preset-
 Step	 +  Shift + Pause / Step /	 Info	 Info / Angle
 Instant Replay	 +  Shift + Left	 >>I	 >>I / Preset+
 Instant Skip	 +  Shift + Right	 Return	 Back / Return



[illegible]