



| Original | | Replacement | | Original | | Replacement | |
|----------|------------|-------------|-------------------------|----------|----------|-------------|------------------|
| | Display | | Display / Media | | Vol- | | Vol- |
| | Power | | Power | | Tv Menu | | Menu / Home |
| | Normal | | Shift + Display / Media | | Vol+ | | Vol+ |
| | Tv/Av/DVD | | TV/Radio / | | Up | | Up |
| | Sleep | | Sleep / Timer | | PR+ | | CH+ / Page+ |
| | 1 | | 1 | | Left | | Left |
| | 2 | | 2 | | Right | | Right |
| | 3 | | 3 | | Mute | | Mute / Dimmer |
| | 4 | | 4 | | PR- | | CH- / Page- |
| | 5 | | 5 | | Down | | Down |
| | 6 | | 6 | | OK/Enter | | OK |
| | 7 | | 7 | | DVD Menu | | D.Menu / Top |
| | 8 | | 8 | | o)) | | AV / Input / RDS |
| | 9 | | 9 | | I<< | | I<< / Preset- |
| | Aspect | | Smart / List | | >>I | | >>I / Preset+ |
| | 0 | | 0 | | [...] | | Subtitle / EQ |
| | Sound Mode | | Sound / Title | | << | | << / Tune- |





| Original | Replacement |
|------------|----------------------------|
| Play | Play / Slow |
| Pause | Pause / Step / Freeze |
| >> | >> / Tune+ |
| Open/Close | Eject / Surround |
| Stop | Stop / Hold |
| 3D | Picture / Format |
| Title/PBC | Text / Goto |
| Setup | Setup / OPT / |
| Repeat | Shift + Green / APP / |
| A-B | Shift + Yellow / YouTube / |
| Program | Shift + TV/Radio / Program |
| Camera | Shift + Info / Angle |
| Zoom | Zoom / Size |
| [=i] | Info / Angle |
| Red/Clear | Red / Netflix / Search |
| Red/Clear | Exit / Cancel / Clear |
| Green | Green / APP / Repeat |

| Original | Replacement |
|---------------|-----------------------------|
| Yellow/Search | Yellow / YouTube / Repeat |
| Yellow/Search | Shift + Red / Netflix / |
| Blue | Blue / Prime Video / Random |

