




 

 



 











 

 

 

 



 

 


 


 
 

 








 

 
 
 
 

 
 

 








Original	Replacement	Original	Replacement
	Power		Power
	Source		AV
	TV		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text
	Info		Info
	Menu		Menu
	Picture		Format
	Sound		Dual
	PRG +		Ch +
	PRG -		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol +		Vol +
	Vol -		Vol -
	CTRL		Media
	Mute		Mute
	Exit		Exit
	Size / Audio		Shift + Dual
	Still / Subt		Subt
	PIP / REP		Options
	Focus / A-B		Eject
	Normal / Title		Ok





Original		Replacement		Original	Replacement
	CVBS1	 + 	Shift + 1		
	CVBS2	 + 	Shift + 2		
	CVBS3	 + 	Shift + 3		
	Y Pb Pr	 + 	Shift + 4		
	YC1	 + 	Shift + 5		
	YC2	 + 	Shift + 6		
	PC		Pre Ch		
	DVI / HDMI		Smart		
	[≡?] / MTS		List		
	[≡] / Sleep		Sleep		
	[≡i] / Time		3D		
	[≡] / PREPG		Guide		
	Red / Delete		Red		
	Green / Skip		Green		
	Yellow / Insert		Yellow		
	Blue / Replace		Blue		

