 

 

 

 



 

 



 



 





 



 

 





 

 

 












 


 

 

 


 






Original	Replacement	Original	Replacement
 Standby	 Power	 Right	 Right
 Rec PVR	 Rec / Rec Mode	 Vol+	 Vol+
 List PVR	 Smart / List	 Favourite	 Fav / Marker / PC
 Mute	 Mute / Dimmer	 CH-	 CH- / Page-
 EPG	 Guide / EPG / -/--	 Down	 Down
 Info	 Info / Angle	 Tv/Radio	 TV/Radio /
 TTX	 Text / Goto	 1	 1
 Audio	 Audio / Lang I/II	 2	 2
 DTV/VCR	 AV / Input / RDS	 3	 3
 Subtitle	 Subtitle / EQ	 Recall	 Back / Return
 Menu	 Menu / Home	 4	 4
 CH+	 CH+ / Page+	 5	 5
 Up	 Up	 6	 6
 Exit	 Exit / Cancel / Clear	 Goto	 Shift + Text /
 Left	 Left	 7	 7
 Vol-	 Vol-	 8	 8
 OK	 OK	 9	 9





Original		Replacement		Original		Replacement	
	0		0				
	<<		<< / Tune-				
	>>		>> / Tune+				
	I<<		I<< / Preset-				
	>>I		>>I / Preset+				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	Stop		Stop / Hold				
	RPT		Shift + Green / APP /				
	Red/Zoom		Zoom / Size				
	Red/Zoom		Red / Netflix / Search				
	Green/←		Green / APP / Repeat				
	Yellow/→		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				





Original		Replacement		Original		Replacement	
	Standby		Power		Right		Right
	Rec PVR		Rec / Rec Mode		Vol+		Vol+
	List PVR		Smart / List		Favourite		Fav / Marker / PC
	Mute		Mute / Dimmer		CH-		CH- / Page-
	EPG		Guide / EPG / -/--		Down		Down
	Info		Info / Angle		Tv/Radio		TV/Radio /
	TTX		Text / Goto		1		1
	Audio		Audio / Lang I/II		2		2
	DTV/VCR		AV / Input / RDS		3		3
	Subtitle		Subtitle / EQ		Recall		Back / Return
	Menu		Menu / Home		4		4
	CH+		CH+ / Page+		5		5
	Up		Up		6		6
	Exit		Exit / Cancel / Clear		Goto		Shift + Text /
	Left		Left		7		7
	Vol-		Vol-		8		8
	OK		OK		9		9





Original		Replacement		Original		Replacement	
	0		0				
	<<		<< / Tune-				
	>>		>> / Tune+				
	I<<		I<< / Preset-				
	>>I		>>I / Preset+				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	Stop		Stop / Hold				
	RPT		Shift + Green / APP /				
	Red/Zoom		Zoom / Size				
	Red/Zoom		Red / Netflix / Search				
	Green/←		Green / APP / Repeat				
	Yellow/→		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				

