



Original	Replacement
Power	Power
Eject	Eject / Surround
Mute	Mute / Dimmer
P.Mode	Picture / Format
S.Mode	Sound / Title
Nicam	Audio / Lang I/II
Aspect	Shift + Picture / Format
1	1
2	2
3	3
Red	Red / Netflix / Search
4	4
5	5
6	6
Green / Goto	Shift + Text /
Green / Goto	Green / APP / Repeat
7	7

Original	Replacement
8	8
9	9
Yellow / Angle	Shift + Info / Angle
Yellow / Angle	Yellow / YouTube / Repeat
-/--	Shift + Guide / EPG / -/--
0	0
Recall	Back / Return
Blue / D.Dis	Blue / Prime Video / Random
Blue / D.Dis	Shift + Display / Media
Up / PR+	CH+ / Page+
Up / PR+	Up
Left / Vol-	Left
Left / Vol-	Vol-
OK	OK
Right / Vol+	Right
Right / Vol+	Vol+
Down / PR-	CH- / Page-





Original	Replacement	Original	Replacement
Down / PR-	Down	Play/Pause / EPG	Play / Slow
Source	AV / Input / RDS	Play/Pause / EPG	Guide / EPG / -/-
Sleep	Sleep / Timer	Play/Pause / EPG	Pause / Step / Freeze
Info	Info / Angle	Stop / List	Stop / Hold
Menu	Menu / Home	Stop / List	Smart / List
Repeat / TXT	Text / Goto	<< / DTV/Radio	<< / Tune-
Repeat / TXT	Shift + Green / APP / REPEAT	<< / DTV/Radio	TV/Radio /
A-B / Hold	Shift + Stop /	>> / FAV	>> / Tune+
A-B / Hold	Shift + Yellow / YouTube / REPEAT A-B	>> / FAV	Fav / Marker / PC
Language / Mix	Shift + Audio / Lang I/II	I<< / Page	I<< / Preset-
Subtitle /	Subtitle / EQ	>>I / Page Up	>>I / Preset+
Setup / Index	Setup / OPT /	Exit	Exit / Cancel / Clear
DVD Menu /	D.Menu / Top	D.Vol+ / FAV+	Shift + Vol+
DVD Menu /	Shift + Zoom /	Rec	Rec / Rec Mode
Title / Reveal	Shift + Sound / Title	Media	Display / Media
Zoom / Cancel	Zoom / Size	Still	Shift + Pause / Step /
Zoom / Cancel	Shift + Exit / Cancel / Clear	D.Vol- / FAV-	Shift + Vol-

