

















 












 













 


 












 


 










 





Original	Replacement	Original	Replacement
 Aper / Chiuso	 Eject / Surround	 8	 8
 Video / Y	 AV / Input / RDS	 9	 9
 Power	 Power	 Prog	 TV/Radio /
 OSD	 Display / Media	 Intro	 Smart / List
 PBC	 D.Menu / Top	 0	 0
 Titolo	 Sound / Title	 10+	 Guide / EPG / -/-
 Menu	 Menu / Home	 Pausa	 Pause / Step / Freeze
 Ricerca	 Red / Netflix / Search	 Info / Play	 Play / Slow
 1	 1	 Info / Play	 Info / Angle
 2	 2	 Up	 Up
 3	 3	 Left	 Left
 Repeticione	 Green / APP / Repeat	 Setup	 Setup / OPT /
 4	 4	 Right	 Right
 5	 5	 Ritorno	 Back / Return
 6	 6	 Down	 Down
 A-B RPT	 Yellow / YouTube / Repeat	 Stop	 Stop / Hold
 7	 7	 <I Ralent	 CH- / Page-





Original		Replacement		Original	Replacement
	Ralent I>		CH+ / Page+		
	<< F.REV		<< / Tune-		
	>> F.FWD		>> / Tune+		
	Step		Shift + Pause / Step /		
	Zoom		Zoom / Size		
	I<< Prec		I<< / Preset-		
	>>I Succ		>>I / Preset+		
	Sottotitoli		Subtitle / EQ		
	NTSC/PAL		Picture / Format		
	Volume-		Vol-		
	Volume+		Vol+		
	Track		Sleep / Timer		
	Track		Text / Goto		
	Audio		Audio / Lang I/II		
	Muto		Mute / Dimmer		

