





| Original | Replacement |
|--------------|-------------|
| Standby | Power |
| Open / Close | Eject |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| 0 | 0 |
| Goto | Guide |
| Add / Clear | Exit |
| << | << |
| >> | >> |
| Pause | Pause |

| Original | Replacement |
|----------|-------------|
| Play | Play |
| Stop | Stop |
| I<< | I<< |
| >>I | >>I |
| Up | Up |
| Left | Left |
| Enter | Ok |
| Right | Right |
| Down | Down |
| Setup | Options |
| Navigat | Smart |
| Title | List |
| Menu | Menu |
| Subtitle | Subt |
| Angle | Format |
| Source | AV |
| Rec | Rec |





| Original | Replacement | |
|-----------|-------------|---|
| TIMER | Timer |  +  Shift + AV |
| EDIT | Edit |  Media |
| USB | USB |  Red |
| DVD | DVD |  Green |
| HDD | HDD |  Yellow |
| DISC OPER | Disc Oper |  D. Menu |
| SLOW | Slow |  +  Shift + Pause |
| RETURN | Return |  Back |
| REPEAT | Repeat |  Text |
| ZOOM | Zoom |  +  Shift + Eject |
| CH+ | CH+ |  Ch + |
| CH- | CH- |  Ch - |
| P/N | P/N |  TV/R |
| AUDIO | Audio |  Dual |
| DV | DV |  Vol + |
| L/P | L/P |  Info |
| MUTE | Mute |  Mute |

| Original | Replacement | |
|----------|-------------|---|
| TV | TV |  Vol - |
| TV | TV |  Blue |

