


 

 

 


 



Original	Replacement
 Power	 Power
 Scan	 Setup / OPT /
 Time	 Sleep / Timer
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 Vol-	 Vol-
 Source	 AV / Input / RDS
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Mode	 Picture / Format
 Tv/Radio	 TV/Radio /
 Audio	 Audio / Lang I/II
 L/R	 Display / Media
 PC Auto/Subtitle	 Smart / List
 Menu	 Menu / Home
 Program	 Shift + TV/Radio / Program
 Up	 Up

Original	Replacement
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 FAV	 Fav / Marker / PC
 EPG	 Guide / EPG / -/-
 TTX/MIX	 Text / Goto
 Info	 Info / Angle
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





Original	Replacement	Original	Replacement
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--	 + 	Shift + Guide / EPG / -/--
	Recall		Back / Return

Original	Replacement

