















 









| Original | Replacement | | |
|---|-------------|---|-----------------------|
|  | Power |  | Power |
|  | SD/USB- PVR |  | Smart / List |
|  | Time |  | Sleep / Timer |
|  | Mute |  | Mute / Dimmer |
|  | Vol+ |  | Vol+ |
|  | Source |  | AV / Input / RDS |
|  | Ch+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | Mode |  | Picture / Format |
|  | Ch- |  | CH- / Page- |
|  | Tv/Radio |  | TV/Radio / |
|  | Eject |  | Eject / Surround |
|  | Audio |  | Audio / Lang I/II |
|  | Play |  | Play / Slow |
|  | Pause |  | Pause / Step / Freeze |
|  | L/R |  | Display / Media |
|  | Stop |  | Stop / Hold |

| Original | Replacement | | |
|---|--------------------|---|------------------------|
|  | Subtitle / PC Auto |  | Subtitle / EQ |
|  | Menu |  | Menu / Home |
|  | Up |  | Up |
|  | Exit |  | Exit / Cancel / Clear |
|  | << |  | << / Tune- |
|  | Left |  | Left |
|  | Ok |  | OK |
|  | Right |  | Right |
|  | Fav |  | Fav / Marker / PC |
|  | >> |  | >> / Preset+ |
|  | Down |  | Down |
|  | >> |  | >> / Tune+ |
|  | Epg |  | Guide / EPG / -/- |
|  | I<< |  | I<< / Preset- |
|  | TTX/MIX |  | Text / Goto |
|  | Info/Display |  | Info / Angle |
|  | Red/Dvd Menu |  | Red / Netflix / Search |



