



Original	Replacement
	Power
	Mute
	Play
	Pause
	Stop
	Rec
	<<
	>>
	Lang
	Source (Games)
	Movie-Music-Phot
	[≡]..
	* / O
	TV
	Q.Menu
	[-O-]
	[≡]/Text
Replacement	
	Power
	Mute / Dimmer
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	Rec / Rec Mode
	<< / Tune-
	>> / Tune+
	Audio / Lang I/II
	Eject / Surround
	Picture / Format
	Zoom / Size
	Sleep / Timer
	TV / Radio /
	D.Menu / Top
	Setup / OPT /
	Text / Goto

Original	Replacement
	Menu
	Up
	i
	Left
	OK
	Right
	Exit
	Down
	Back
	Vol+
	World (Violet)
	PR+
	Vol-
	* / Q
	PR-
	1
	2
Replacement	
	Menu / Home
	Up
	Info / Angle
	Left
	OK
	Right
	Exit / Cancel / Clear
	Down
	Back / Return
	Vol+
	Smart / List
	CH+ / Page+
	Vol-
	Display / Media
	CH- / Page-
	1
	2



