



Original	Replacement
 POWER	 Power
 MUTE	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--
 0	 0
 RECALL	 Back / Return
 RED	 Red / Netflix / Search
 GREEN	 Green / APP / Repeat
 YELLOW	 Yellow / YouTube / Repeat

Original	Replacement
 BLUE	 Blue / Prime Video / Random
 MENU	 Menu / Home
 VOL+	 Vol+
 CH+	 CH+ / Page+
 INFO	 Info / Angle
 VOL-	 Vol-
 CH-	 CH- / Page-
 <<	 << / Tune-
 >>	 >> / Tune+
 PLAY/PAUSE	 Play / Slow
 PLAY/PAUSE	 Pause / Step / Freeze
 STOP	 Stop / Hold
 UP	 Up
 LEFT	 Left
 OK	 OK
 RIGHT	 Right
 EPG	 Guide / EPG / -/--





Original	Replacement
DOWN	Down
EXIT	Exit / Cancel / Clear
FORMAT	Picture / Format
AUDIO	Audio / Lang I/II
TEXT	Text / Goto
PIP	Display / Media
Timer	+ Shift + Sleep / Timer
zzZ	Sleep / Timer

Original	Replacement

