 

 

 

 



 



 

 

 
 
 
 
 
 


 
 
 

 

 

 

 
 


 
 

 
 



 


 
 



 



 
 

 




 


 

 
 





	Original	Replacement		Original	Replacement
	 Power	 Power		 Subpage	 Eject
	 Display	 Shift + Info		 PRE-CH	 Pre Ch
	 Mute	 Mute		 Source	 AV
	 Video	 Back		 PIP	 3D
	 Scart	 Smart		 Sound	 Dual
	 PC	 Media		 Sleep	 Sleep
	 TV	 TV/R		 DTV Menu	 D. Menu
	 1	 1		 Zoom-	 <<
	 2	 2		 Zoom+	 >>
	 3	 3		 Vol+	 Vol +
	 4	 4		 Vol-	 Vol -
	 5	 5		 CH+	 Ch +
	 6	 6		 CH-	 Ch -
	 7	 7		 Menu	 Menu
	 8	 8		 Exit	 Exit
	 9	 9		 Up	 Up
	 0	 0		 Down	 Down





Original	Replacement	Original	Replacement
 Right	 Right		
 Left	 Left		
 OK	 Ok		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Teletext	 Text		
 Mix	 Options		
 Info	 Info		
 Index	 Guide		
 Size	 Format		
 Hold	 List		
 Subtitle	 Subt		
 Reveal	 Shift + Text		

