



 




 
 

 



 

 
























 


 

 






 

 
 




 












 

 




Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer
 Audio	 Audio / Lang I/II
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Freeze	 Pause / Step / Freeze
 0	 0

Original	Replacement
 Recall	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Menu	 Menu / Home
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 OK / Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Info	 Info / Angle
 CH+	 CH+ / Page+
 Home	 Shift + Menu /
 Vol+	 Vol+





	Original	Replacement		Original	Replacement
	 CH-	 CH- / Page-		 Zoom-	 Shift + Down
	 Mouse	 Smart / List		 Zoom+	 Shift + Up
	 Vol-	 Vol-		 EPG	 Guide / EPG / -/-
	 << / Text	 << / Tune-		 DTV / Radio	 TV/Radio /
	 << / Text	 Text / Goto		 Rec	 Rec / Rec Mode
	 >> / Hold	 Shift + Stop /		 Subtitle	 Subtitle / EQ
	 >> / Hold	 >> / Tune+			
	 I<< / Mix	 I<< / Preset-			
	 I<< / Mix	 Shift + Text /			
	 >>I / Reveal	 >>I / Preset+			
	 Play/Pause / Index	 Play / Slow			
	 Stop / Size	 Stop / Hold			
	 Stop / Size	 Zoom / Size			
	 FAV	 Fav / Marker / PC			
	 Aspect	 Shift + Picture / Format			
	 File	 Display / Media			
	 Delete	 Eject / Surround			

