 




 













Original		Replacement		Original		Replacement	
	Power		Power		>>		>> / Tune+
	Mute		Mute / Dimmer		Menu		Menu / Home
	Red		Red / Netflix / Search		Up		Up
	Green		Green / APP / Repeat		Back		Back / Return
	Yellow		Yellow / YouTube / Repeat		Left		Left
	Blue		Blue / Prime Video / Random		OK		OK
	Internet		Smart / List		Right		Right
	Source		AV / Input / RDS		i		Info / Angle
	Lang		Audio / Lang I/II		Down		Down
	Tv/Radio		TV/Radio /		Exit		Exit / Cancel / Clear
	Subtitle		Subtitle / EQ		Vol+		Vol+
	LIB		Picture / Format		P::P		Display / Media
	Rec		Rec / Rec Mode		PR+		CH+ / Page+
	Stop		Stop / Hold		Vol-		Vol-
	<<		<< / Tune-		FAV		Fav / Marker / PC
	Play		Play / Slow		PR-		CH- / Page-
	Pause		Pause / Step / Freeze		1		1





Original	Replacement	Original	Replacement
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Text		Text / Goto
	0		0
	Guide		Guide / EPG / -/--

Original	Replacement

