



 



 



 








 










 





 





| Original | Replacement |
|--|--|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  Nicam/A2 |  Shift + Audio / Lang I/II |
|  Aspect |  Shift + Picture / Format |
|  P.Mode |  Picture / Format |
|  S.Mode |  Sound / Title |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  Shift + Guide / EPG / -/-- |  Shift + Guide / EPG / -/-- |
|  0 |  0 |

| Original | Replacement |
|--|---|
|  Recall |  Back / Return |
|  Display |  Display / Media |
|  Freeze |  Pause / Step / Freeze |
|  Rec/Auto |  Rec / Rec Mode |
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |
|  Sleep |  Sleep / Timer |
|  Up |  Up |
|  Source |  AV / Input / RDS |
|  Left |  Left |
|  Enter |  OK |
|  Right |  Right |
|  Down |  Down |
|  Menu |  Menu / Home |
|  Exit |  Exit / Cancel / Clear |





| Original | | Replacement | | Original | | Replacement | |
|---|-----------------|---|-------------------|---|----------|---|-------------------|
|  | CH+ |  | CH+ / Page+ |  | DTV |  | Smart / List |
|  | Subtitle |  | Subtitle / EQ |  | EPG |  | Guide / EPG / -/- |
|  | Vol+ |  | Vol+ |  | Tv/Radio |  | TV/Radio / |
|  | CH- |  | CH- / Page- | | | | |
|  | T.Shift |  | Setup / OPT / | | | | |
|  | Vol- |  | Vol- | | | | |
|  | Play/Pause/Hold |  | Play / Slow | | | | |
|  | Play/Pause/Hold |  | Shift + Stop / | | | | |
|  | <</Reveal |  | << / Tune- | | | | |
|  | >>/Size |  | Zoom / Size | | | | |
|  | >>/Size |  | >> / Tune+ | | | | |
|  | Stop/Index |  | Stop / Hold | | | | |
|  | I<< |  | I<< / Preset- | | | | |
|  | S.Page/>>I |  | >>I / Preset+ | | | | |
|  | Text |  | Text / Goto | | | | |
|  | FAV |  | Fav / Marker / PC | | | | |
|  | Audio |  | Audio / Lang I/II | | | | |

