





Original	Replacement	Original	Replacement
 Power	 Power	 0	 0
 Mute	 Mute	 Menu	 Menu
 FAV	 Pre Ch	 Exit	 Exit
 Subtitle	 Subt	 Up	 Up
 Info	 Info	 Left	 Left
 TTX	 Text	 OK	 Ok
 Recall	 Back	 Right	 Right
 List	 List	 Down	 Down
 1	 1	 EPG	 Guide
 2	 2	 Vol +	 Vol +
 3	 3	 Vol -	 Vol -
 4	 4	 Timer	 AV
 5	 5	 Pg Dn	 Shift + Ch -
 6	 6	 Pg Up	 Shift + Ch +
 7	 7	 <<	 <<
 8	 8	 >>	 >>
 9	 9	 I<<	 I<<





Original		Replacement		Original		Replacement	
	>>I		>>I				
	CH +		Ch +				
	CH -		Ch -				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	Audio		Dual				
	PAL / NTSC		3D				
	Sleep		Sleep				
	TV / Radio		TV/R				
	Red		Red				
	Aspect		Format				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				





Original		Replacement		Original		Replacement	
	Power		Power		0		0
	Mute		Mute		Menu		Menu
	FAV		Pre Ch		Exit		Exit
	Subtitle		Subt		Up		Up
	Info		Info		Left		Left
	TTX		Text		OK		Ok
	Recall		Back		Right		Right
	List		List		Down		Down
	1		1		EPG		Guide
	2		2		Vol +		Vol +
	3		3		Vol -		Vol -
	4		4		Timer		AV
	5		5		Pg Dn		Shift + Ch -
	6		6		Pg Up		Shift + Ch +
	7		7		<<		<<
	8		8		>>		>>
	9		9		I<<		I<<




 
 

 








 




 





 



Original		Replacement		Original		Replacement	
	>>I		>>I				
	CH +		Ch +				
	CH -		Ch -				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	Audio		Dual				
	PAL / NTSC		3D				
	Sleep		Sleep				
	TV / Radio		TV/R				
	Red		Red				
	Aspect		Format				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				





Original	Replacement	Original	Replacement
Power		Power	
Mute		Mute	
FAV		Pre Ch	
Subtitle		Subt	
Info		Info	
TTX		Text	
List		List	
Recall		Back	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	

Original	Replacement	Original	Replacement
0		0	
Menu		Menu	
Exit		Exit	
EPG		Guide	
Swap		Media	
Up		Up	
Down		Down	
Right		Right	
Left		Left	
OK		Ok	
Vol+		Vol +	
Vol-		Vol -	
Pg Up		Shift + Up	
PG Dn		Shift + Down	
CH+		Ch +	
CH-		Ch -	
>>		>>	





Original	Replacement	Original	Replacement
<<		<<	
>>		>>	
I<<		I<<	
Play		Play	
Pause/Timeshift		Pause	
Stop		Stop	
Rec		Rec	
Audio		Dual	
M/P		Smart	
Tv/Radio		TV/R	
A-B		Options	
Red/Zoom		Red	
Green/Aspect		Green	
Yellow/V-Formet		Yellow	
Blue/Timer		Blue	

