



Original		Replacement		Original		Replacement	
	Power		Power		3 / >> / >		+ / Play
	Source		Source		4 / VGA		Volt / Focus
	Zoom		Eco / Aspect		5 / Stop / Back		Vol - / Page -
	Hide		Auto		6 / Video		Comp / Video
	Ratio		Shift + Mode		7 / SD / USB A		Shift + Comp / Video
	Freeze		Freeze / Timer		8 / HDMI / DVI		- / Stop
	Up		Up		9 / Lan Wifi		Help / Info
	Down		Down		0 / USB B		Blank / Mute
	Right		Right		PgUp /		Shift + Up
	Left		Left		PgDn / S-Video		Shift + Down
	Menu		Menu				
	Mode		Mode				
	3D		3D / Invert				
	Media Home		Shift + Menu				
	Media Setup		Shift + Power				
	1 / << /  <		Vol + / Page +				
	2 / >   / Enter		Enter				

