















Original	Replacement	Original	Replacement
 POWER	 Power	 ANGLE	 Info / Angle
 SOURCE	 AV / Input / RDS	 AUDIO	 Audio / Lang I/II
 DVD/CARD/USB	 Smart / List	 PBC	 Picture / Format
 MUTE	 Mute / Dimmer	 TITLE	 Sound / Title
 1	 1	 UP	 Up
 2	 2	 STOP	 Stop / Hold
 3	 3	 PLAY/PAUSE	 Play / Slow
 4	 4	 LEFT	 Left
 5	 5	 ENTER	 OK
 6	 6	 RIGHT	 Right
 7	 7	 MODE	 D.Menu / Top
 8	 8	 SETUP	 Setup / OPT /
 9	 9	 DOWN	 Down
 0	 0	 ZOOM	 Zoom / Size
 10+	 Guide / EPG / -/--	 MENU	 Menu / Home
 GOTO	 Text / Goto	 REPEAT	 Green / APP / Repeat
 SUBTITLE	 Subtitle / EQ	 A-B	 Yellow / YouTube / Repeat





	Original	Replacement		Original	Replacement
	I<<	 I<< / Preset-		>>I	 >>I / Preset+
	PROGRAM	 TV/Radio /		DISPLAY	 Display / Media
	<<	 << / Tune-		>>	 >> / Tune+

	Original	Replacement

