 





 
 
 

 
 
 
 




 
 



 
 


 






 






 



 

 



 


 

 



 


 














Original	Replacement	Original	Replacement
 Power	 Power	 7	 7
 Vol+	 Vol +	 8	 8
 Vol-	 Vol -	 9	 9
 Play/Preset <>	 Play	 0	 0
 Stop/Clear	 Stop	 +10	 Guide
 Pause/Set	 Pause	 1	 Back
 >>/>>/Up	 >>	 2	 Options
 Down/ <</<<	 <<	 3	 Text
 Window Up	 Ch +	 4	 Media
 Window Down	 Ch -	 6	 Dual
 Function	 Menu	 7	 AV
 1	 1	 8	 Sleep
 2	 2	 9	 Info
 3	 3	 0	 TV/R
 4	 4	 +10	 Subt
 5	 5	 1	 Shift + 1
 6	 6	 2	 Shift + 2





	Original	Replacement	
	3 CD Direct	 + 	Shift + 3
	4 CD Direct	 + 	Shift + 4
	5 CD Direct	 + 	Shift + 5

	Original	Replacement

