













 



 




 




 
 




Original	Replacement	Original	Replacement
Power	Power	Rec	Rec / Rec Mode
Tv/Radio	TV/Radio /	Stop	Stop / Hold
Red	Red / Netflix / Search	I<<	I<< / Preset-
Green	Green / APP / Repeat	FAV	Fav / Marker / PC
Yellow	Yellow / YouTube / Repeat	>>I/Index	>>I / Preset+
Blue	Blue / Prime Video / Random	Menu	Menu / Home
Subtitle	Subtitle / EQ	Up	Up
Text	Text / Goto	Source	AV / Input / RDS
Hold	Shift + Stop /	Left	Left
TVG	Guide / EPG / -/--	OK	OK
Audio	Audio / Lang I/II	Right	Right
Play	Play / Slow	Down	Down
Pause	Pause / Step / Freeze	Exit	Exit / Cancel / Clear
Size	Zoom / Size	Aspect	Picture / Format
<<	<< / Tune-	Vol+	Vol+
Subpage	Eject / Surround	Mute	Mute / Dimmer
>>	>> / Tune+	CH+	CH+ / Page+





Original	Replacement	Original	Replacement
 Vol-	 Vol-		
 Display	 Display / Media		
 CH-	 CH- / Page-		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 -/--	 Shift + Guide / EPG / -/--		
 0	 0		
 Recall	 Back / Return		

Original	Replacement

